

THC Log Analyzer Users Guide

Version 2019Q3.3

1. Log Analyser Installation

Download and Install .Net Framework Version 2

• .Net Framework 2.0 - Microsoft .Net Framework v2 is required for the TMC3in1 Log Analyser to install properly. Please confirm you have .Net Framework V2 installed or Download and install from Microsoft: https://www.microsoft.com/en-us/download/details.aspx?id=1639.

Download and Install The TMC3in1 Log Analyser

- **Download TMC3in1 Log Analyser** Download the Log Analyser from Avid CNC. (www.avidcnc.com/cdata/cad/2018Q2/THCLogAnalyser.msi)
- Install TMC3in1 Log Analyser Run the "THCLogAnalyzer.msi" you downloaded from the above link.

Windows protected your PC	×
Windows Defender SmartScreen prevented an unrecognized app from starting. Running this app might put your PC at risk. <u>More info</u>	
Don't run	Į


• You may see a Windows Defender alert display in some versions of Windows. Press "More Info" and then "Run Anyway" to run the Log Analyser Installer. Follow the on screen prompts to complete the installation.



2. Collect THC Log Data

File Ops Tool Change	Jogging Diagnostics THC Anti-E	Dive
Homing Sensors X Y Slaved	Limit Switches X Y Y++	TMC3in1 Status Active Communications No Communications Updating Firmware
Z	Slaved Z++	THC Logging
Input Signals	Emergency Stop	This will only enable logging for the current session. Permanent enabling is in the TMC3in1 Config.

• Setting up THC logging in Mach4 - To collect THC Log data enable first enable THC logging in Mach4. Click the "THC Logging" toggle to enable.

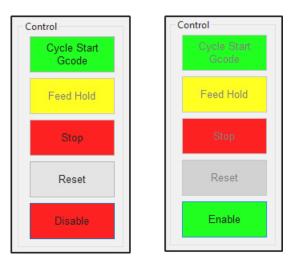


• **Collect Data** - Load G-Code of the cut you wish to log. Once your settings are properly configured for the plasma cutting operation click the "Disable" button on the bottom left of the Mach4 main screen (This will stop logging). When you are ready to cut, press the "Enable" button in the bottom left of the Mach4 main screen (This will start logging) and then "Cycle Start" to execute the cut. Once the cut is complete press "Disable" again (this will stop logging and save the log file).




3. Import Data into Log Analyser

• **Open Log Analyser** - Open the windows start menu, search for "THC Log Analyser" and open the application.

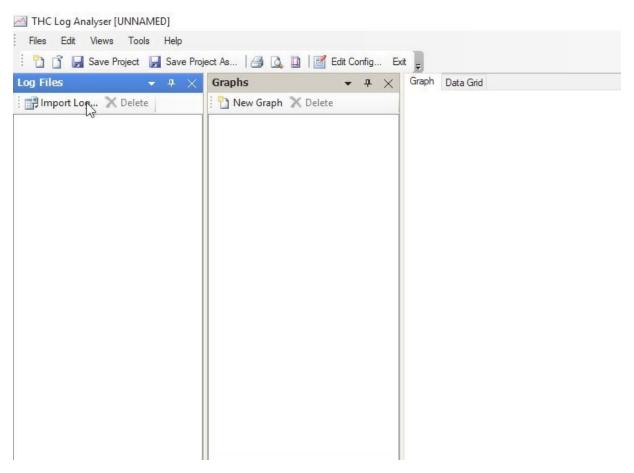


• Import Data - Click the "Import Log" button and navigate to the log file which you collected earlier. The default location of the THC log files is C:\Mach4Hobby\TMC3in1



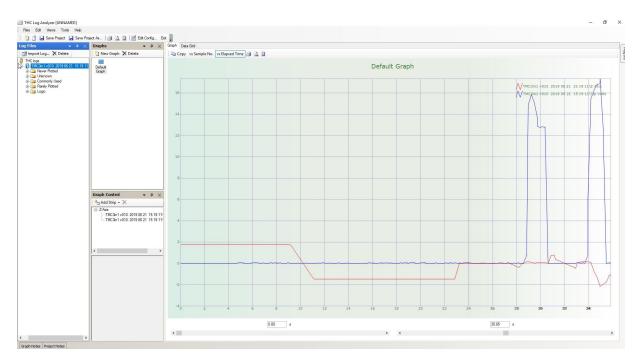

• **Default Graph** - By default the Tip Volts and Z Axis motion of the imported log file will be graphed on the right side of the application window.

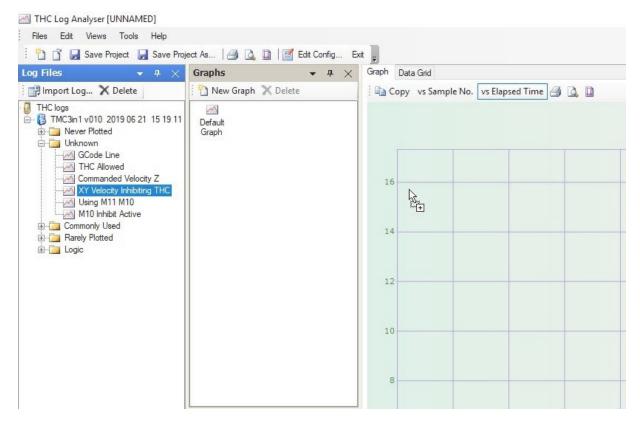

• Adding Log Data to the Graph - Expanding the THC log menu on the left of the screen will display the different data which can plotted and compared. To plot specific data, select it on the left of the screen then click, drag, and drop the data onto the graph (right side of the screen).





• **Changing the Graph Scale** - The sliders at the bottom of the graph will change the time scale of the graph and the position of the graph along said time scale. Shorten the timescale (right slider) and scroll across the graph (left slider) to the point during the cut you wish to analyze.




Graph	Control		-		
🖓 🔤 Ada	d Strip 👻 🕽	ĸ			
⊡- Z-Ax	is				
	TMC3in1 v0	10 2019	06 21	15 1	9 11
1	TMC3in1 v0				-
1.00	TMC3in1 v0				
i	TMC3in1 v0	10 2019	0621	15 1	311
5					>
Z-Axis					
Max	17.32	<			>
Min	-2.15	<			>
	Auto Rar	nge			
	n1 v010 20 V Inhibiting T		15 19	110	Y
Delay	0.00	<			>
Delay		1000			>
Offset	0.00	<			1
	0.00 x1 🞝	< ~			Í

• Scaling Log Data - The Graph Control menu allows you to change the scale of individual data. The original scale of different data (Z axis height 0-8in, Tip volts 100-200V) can be altered (scale x10 or scale /10) to make them more easily comparable.



4. Example Data Analysis

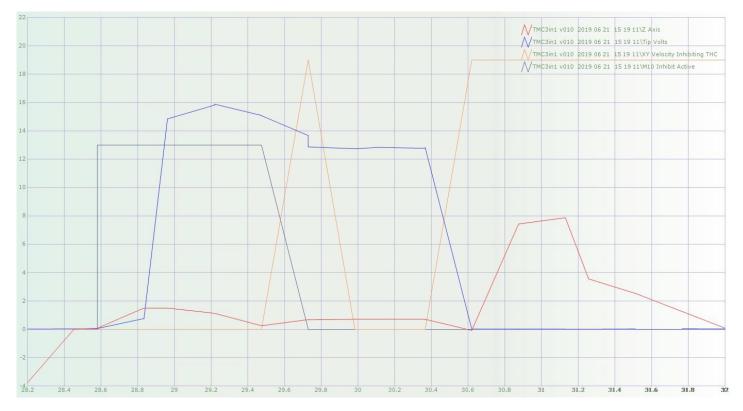


Analyzing the Plotted Data - This data represents a single pierce and small circular cut.

- **M Code Anti-Dive** The green line represents M-code based anti-dive and is shown inhibiting THC movement (green line goes up to 13 at 28.6 seconds) until 29.6 seconds (when the green line returns to 0). This represents the M62P3 and M63P3 lines in the g-code file which occur before the pierce movement and ends after the descend to cut height from pierce height.
- **Tip Volts** The blue line represents the tip voltage. The tip voltage is very high during the pierce operation, this is normal. The tip voltage stabilizes near the target after the torch descends to cut height, torch height control then takes over and modulates Z-axis height to bring actual voltage in line with target voltage. The tip voltage then goes to 0 when the cut finishes.
- XY Velocity Anti-Dive The yellow line represents XY velocity based anti-dive and is shown inhibiting THC movement after the torch descends to cut height but before the machine XY motion is up to speed during the cut feed. XY velocity anti-dive prevents THC motion directly after M Code based anti-dive goes to zero (yellow line spike at 29.8 seconds). Once the machine accelerates and achieves 97% cut feed velocity THC motion is allowed. At 30.4 seconds when the cut ends the machine decelerates and velocity drops below 97% commanded feed, THC motion is once again inhibited.
- Z Axis Position The red line represents the Z axis position. At 28.8 seconds the Torch jumps to pierce height and then descends to cut height at 29.5 seconds. From 29.5 to 30.4 seconds the Z axis slowly increases in height, this mirrors the tip voltage (blue line) which increases steadily to achieve target voltage.



Version 2019Q3.3 © 2020 Avid CNC All Rights Reserved

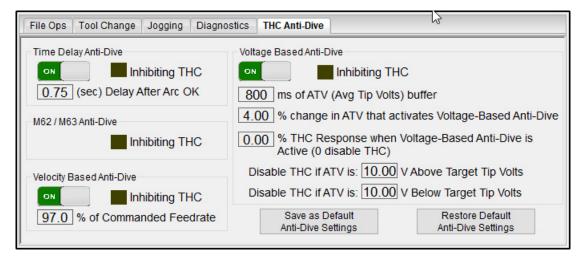

Adjusting the THC settings - The cut analyzed in the above example was successful, so the settings may not need adjustment. However, if an unsuccessful cut (crashed torch, low cut quality) is analyzed it may identify the fault with the THC settings causing the issue.

- Torch Crash The cut may have ended with a torch crash due to a THC diving response, this can generally be avoided by increasing the sensitivity of the anti-dive settings. The anti-dive settings will be shown by the graph to not have inhibited THC motion during the crash. In Mach4 the anti-dive settings may be adjusted on the main screen under the THC Settings operations tab. Increasing the Time Delay after Arc OK, the % of commanded feedrate or decreasing the % change in ATV that activates voltage-based anti-dive may be appropriate depending on the situation. For more information on these anti-dive settings please see Mach4 Plasma Users Guide.
- **Poor Cut Quality** The cut may have completed but failed to follow the material and achieve target voltage during the bulk of the operation, this can potentially cause a poor cut. The graph will show the anti-dive settings as inhibiting THC motion during most of or the entire cut. The solution to this issue is to decrease the sensitivity of the anti-dive settings. Decreasing the Time Delay after Arc OK, the % of commanded feedrate or increasing the % change in ATV that activates voltage-based anti-dive may be appropriate depending on the situation. For more information on these anti-dive settings please see Mach4 Plasma Users Guide.
- Path Rules Another way cut issues may be addressed is to identify which part of the cut is causing the problem (using the log analyzer) and then create a "Cut Rule" in sheetcam which will inhibit or allow THC motion during this feature of the program using M code based anti-dive. For more information on SheetCam cut rules please see SheetCam Software Setup Guide.

